

VI.5.3D-RRSINQOB PROGRAM FCST HCL TECHNIQUE RRSINQOB

Purpose

Technique RRSINQOB sets whether observed instantaneous discharge data are to be printed.

Valid values are NO (0) and YES (1).

The Global default value is NO (0).

This Technique is Universal.

Form of Input

RRSINQOB(integer)

where integer is 1 or 0 specifying whether or not to print data

Example

RRSINQOB(1)

The observed instantaneous discharge data will be printed for all stations that have observations during the run period.